



To Start or Stop logging:



To check gauge mode:

This action has no effect on the current job file.



To run Dashboard Lite:

This software is factory installed on the gauge's memory.



To run Dashboard Professional:

The software must be installed on your PC; It's available on our website at [www.eskyle.com](http://www.eskyle.com).



Click Start and type, "Dashboard"



Click on Dashboard Professional.

